


## HIGH PRESSURE PORTABLE PUMP 80/50B ECO



SKU: 12100003

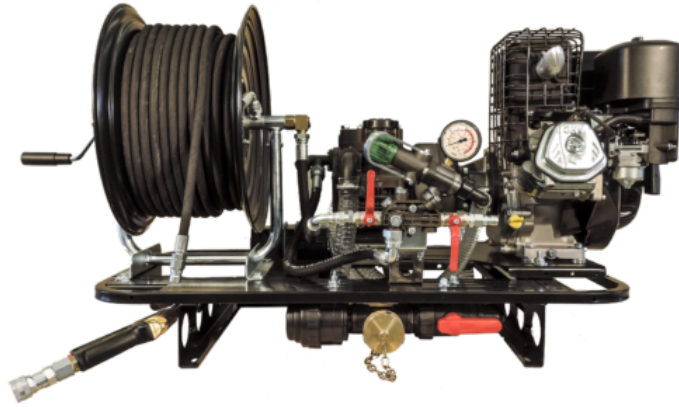

### PRODUCT DESCRIPTION

High pressure portable pump for Forest Fires and small City Fires.  
This kind of pump is specially conceived for bush fires and apartments fires.  
It can be mounted on a pick-up as well on a fire truck to pump small quantities of water with the impact of high pressure.

### FEATURES

- Diaphragm pump with pressure regulator and manometer
- Gearbox in oil-bath
- Gasoline engine 13 HP with electrical starter
- Self supporting frame made of steel tubulars, treated against corrosion
- Manual hose reel with 50 meters HP hose
- Fog-gun for water and foam

### PERFORMANCES

Output 80 lpm @ 50 bar

### PUMP

Type diaphragm pump

Suction n. 1 for suction from external source with STORZ 25 and suction line from water tank.

Outlets n. 2 outlets, with QUICK ATTACK couplings, one of them permanently connected to the hose reel



#### ENGINE

Type 4-strokes gasoline engine  
Made BRIGGS & STRATTON  
Power 13 HP - OHV - Horizontal  
Battery 12 V.

#### HOSE REEL

Type Axial feed, manual winding, made by steel.  
New design to grant the best resistance with lower weight.  
Equipment Mt. 50 of HP SAE R1 hose with QUICK ATTACK couplings on each side.  
Water and Foam fog-gun with 25 lt/1' output - Range 20 meters

#### ACCESSORIES

- Suction hose, 6 meters length, complete with STORZ 25 coupling and foot valve
- Tool kit for small repairs(Engine original)
- Instruction booklets for pump and engine.

#### OPTIONALS EXTRA PRICE

- [Control panel](#)
- Foam System
- Fog-gun for water and foam model [FIREBLOCK](#)
- Automatic Acceleration